




Spare Parts Guide

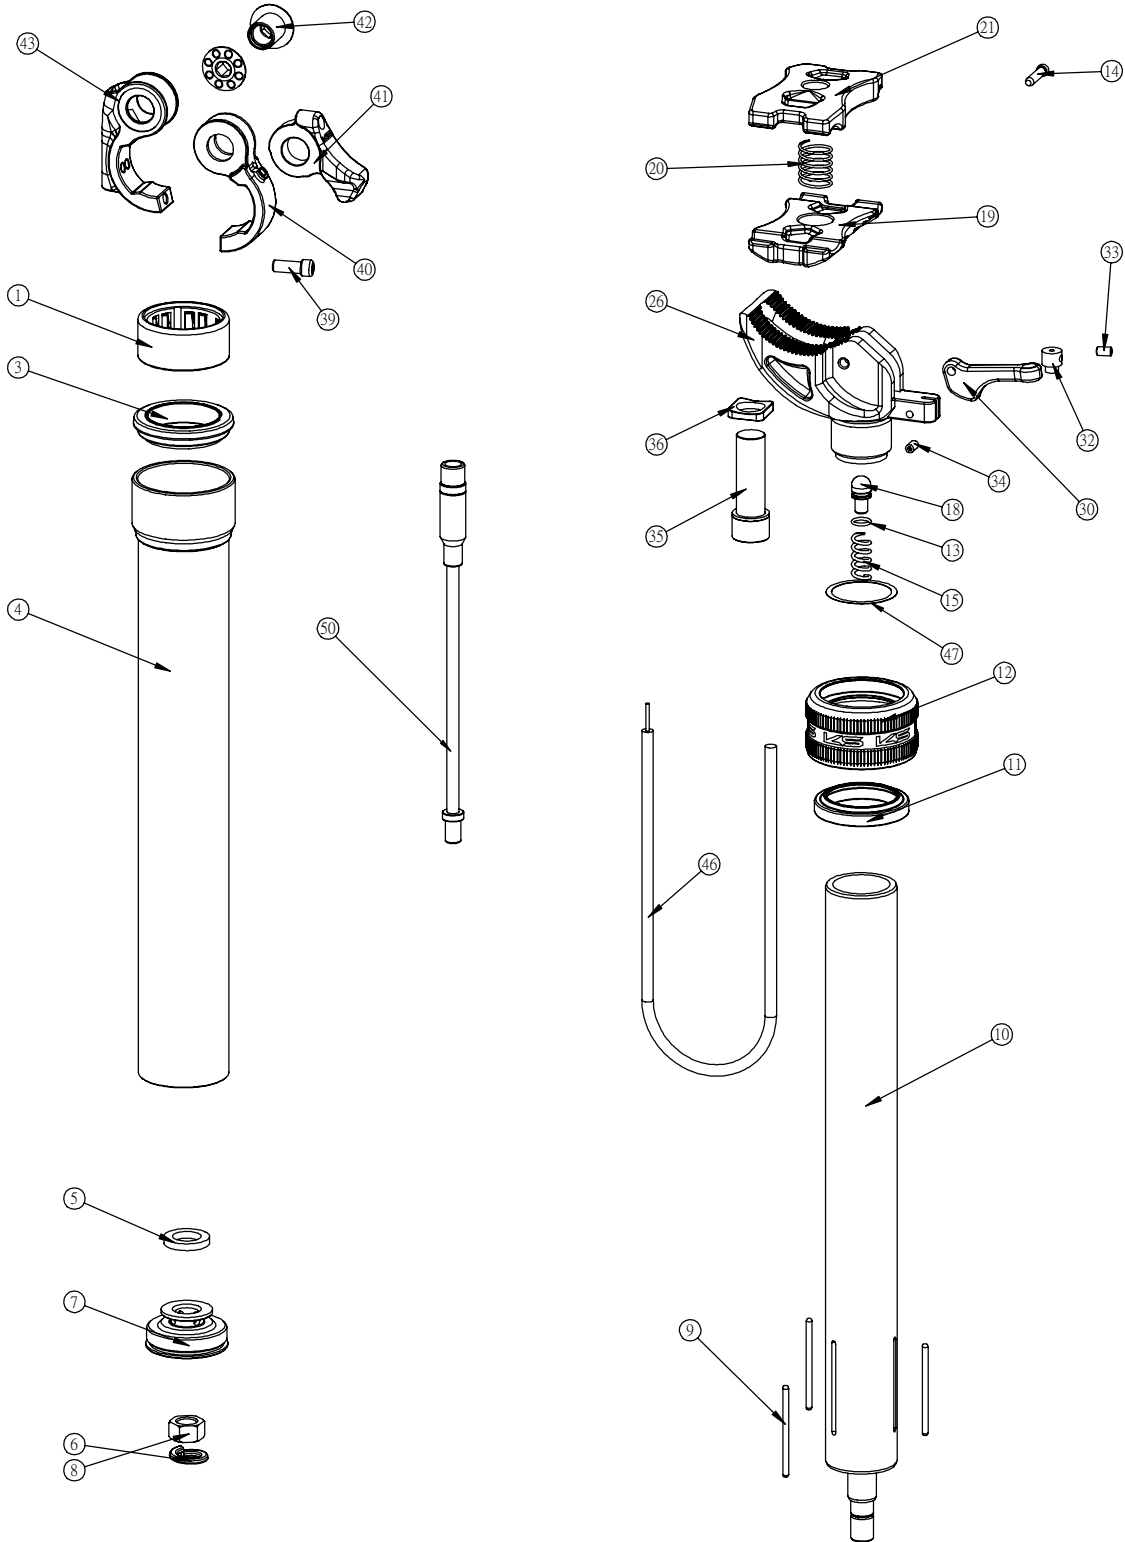

BOM



Index	Part Number	Description
1	P47 05	Roller Bearing
3	P32 06+P23 05	Du Bushing Carrier
4	P40 BHL	Mast Shaft
5	P13 07	Bottom Out Bumper
6	P56 03	Spring washer
7	P10 09	Mast Shaft End Cap
8	P54 02	Cartridge Shaft Nut
9	P26 HL	Lower Guide Bushing
10	A3102-75	Oil pressure stick
	A3102-100	
	A3102-125	
11	P43 06	Wiper Seal
12	P10 10	Seal Collar
13	P285*1	Piston O-ring(Ø 5 × Ø 1)
14	P14 26	Lever/Actuator Pivot Pin
15	P55 10	Piston Spring(Dropzone)
18	P26 GL	Piston(Dropzone)
19	P37 02	Lower Seat Clamp (Dropzone)
20	P55 08	Seat Clamp Spring (Dropzone)
21	P37 01	Upper Seat Clamp (Dropzone)
26	P01 20	Clamp Head (Dropzone)
30	P39 11	Actuator Lever(Dropzone Remote)
32	P57 09	Cable Collar
33	P14 10	Cable Collar Set Screw
34	P14 01	Housing Set Screw
35	P14 19	Seat Clamp Bolt (Dropzone)
36	P31 16	Seat Clamp Bolt Washer(Dropzone)
39	P14 27	Remote Clamp Bolt
40	P57 08	Lower Remote Clamp Half
41	P39 13	Remote Lever
42	P51 01	Remote Clamp Pivot
43	P57 07	Upper Remote Clamp Half
46	P3501-150	Cable and Housing
	P3501-170	
47	P31 22	Washer
50	P35 09	Flex Barrel